

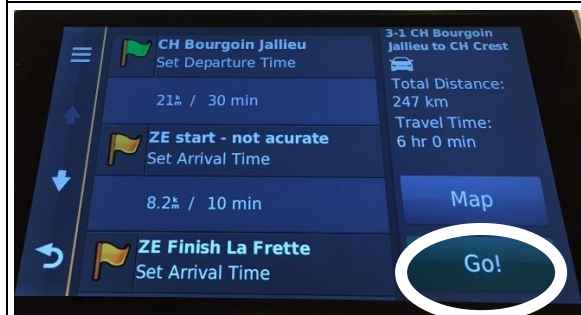


How to use Garmin

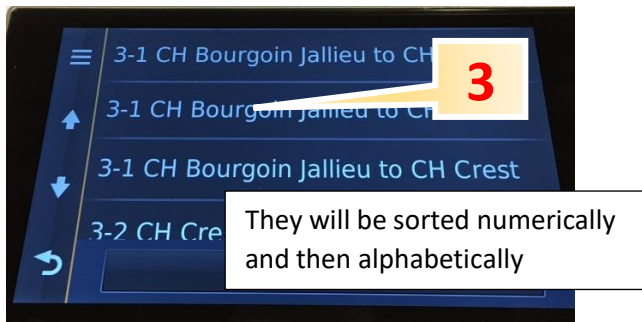


How to choose routes

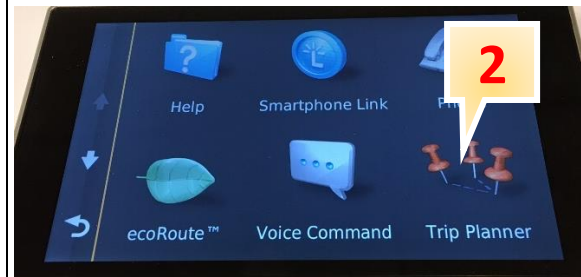

When you have selected a route, a new screen will appear. You get some information about the route, such as name, length and expected time

Here you have 2 options.

To run this route - press GO

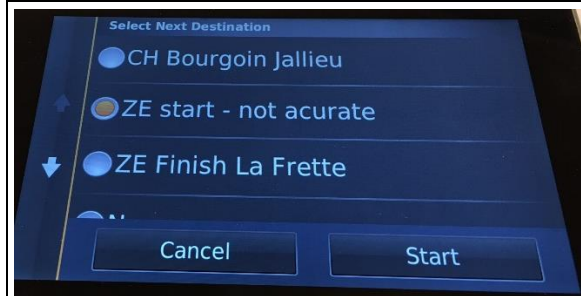

If you are close to start, do not change anything - press start

If you are not close to start you can press the first waypoint on the route - press start - then Garmin will guide you to the starting point and then continue the route.



If you want **to see the route** on the map before choosing it - press Map




You can see the route with waypoints and you can zoom in for details.

You return to the previous screen - press icon on the left

Then select the route - press Go

How to use Garmin

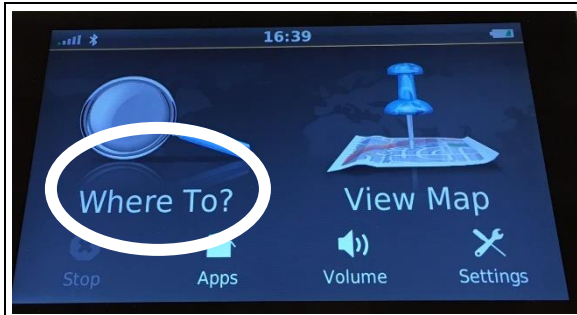

How to choose a **waypoint** – single point

if you want to drive the fastest (shortest) road to a CH, CP or start on ZR.



Press favourites



always choose - all favorites



They will be sorted by your distance to them

go further down the list with the arrows on the left

How to use Garmin

How to delete routes	How to delete waypoints
	
	
